


# Airelight Square2 Trimless Install




## A Step by Step Guide

1

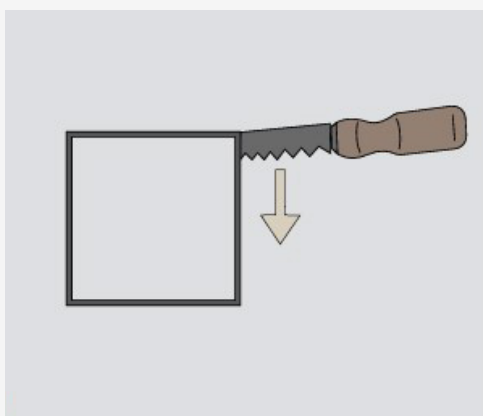


Measure & cut hole to allow luminaire housing to be inserted.  
Approx. 4.25" x 4.25"

Disconnect power & feed wires through ceiling and mount.

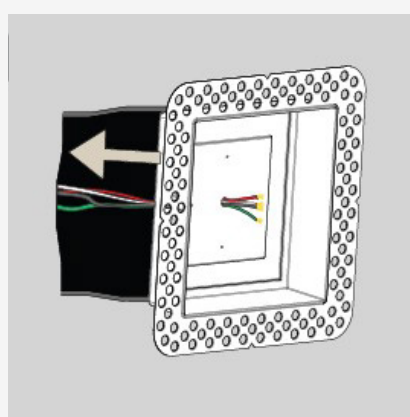


2

3

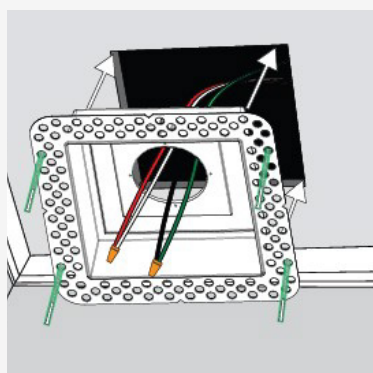


Secure trim using drywall screws.

Use drywall compound mud to cover flange.  
Once dry, sand. Repeat as needed.

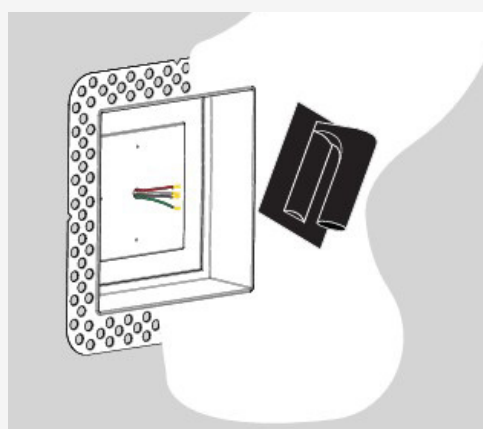

4

5

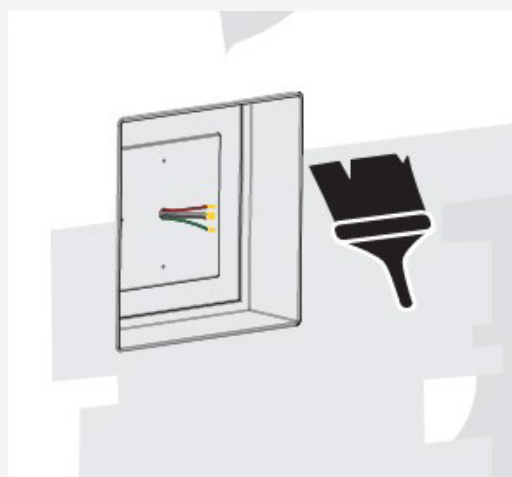

Paint to match surface.  
Once dry, connect the luminaire to the wiring and install using the integrated magnet attachment.