

Instructions for Pendant in Wood Slat Ceiling with Airelight Linear 1.0




Installation: Pendant/Wood Slat Ceiling(Linear 1.0)



Materials

1. Airelight 1.0 Pendant (4')
2. U Bracket (20)
3. Pendant Insert (2)
4. Wood Screw (4)
5. 1/4-20 hex bolt (2)
6. 1/4" washer (2)

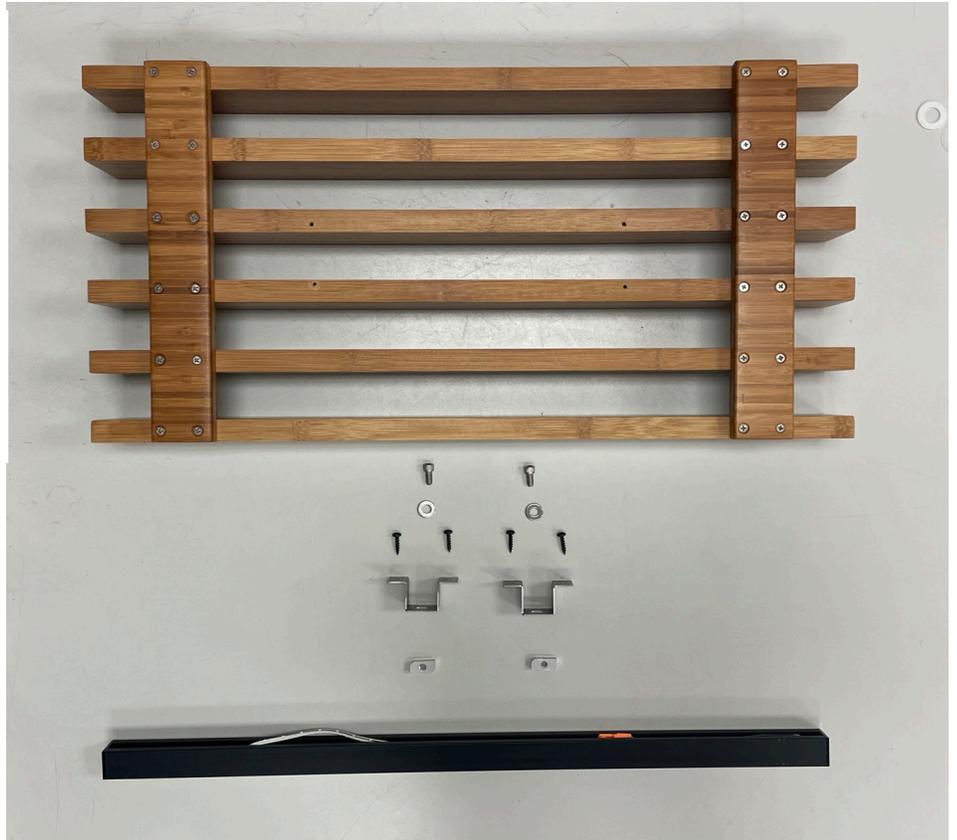

1. Mount U Bracket with wood screws(2) onto Wood Slat Ceiling approx 8" from end of Pendant location. Repeat on other end of desired Pendant location.




2. Insert 1/4-20 hex bolt and 1/4" washer into center hole of U Bracket. Repeat on the opposing bracket.



3. Place pendant inserts into pendant channel at opposite ends.



4. Align pendant insert with hex bolt and lightly tighten to secure pendant. Repeat on the opposing bracket. Adjust as necessary to center pendant between slats. Tighten hex bolts securely.

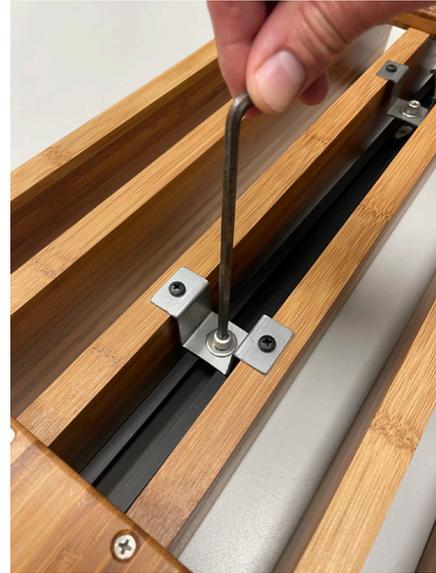

5. Mount Wood Slat Ceiling assembly as instructed by corresponding manufacturer's installation procedure.

